Quantec QT615S Display Interface - Wiring Instructions

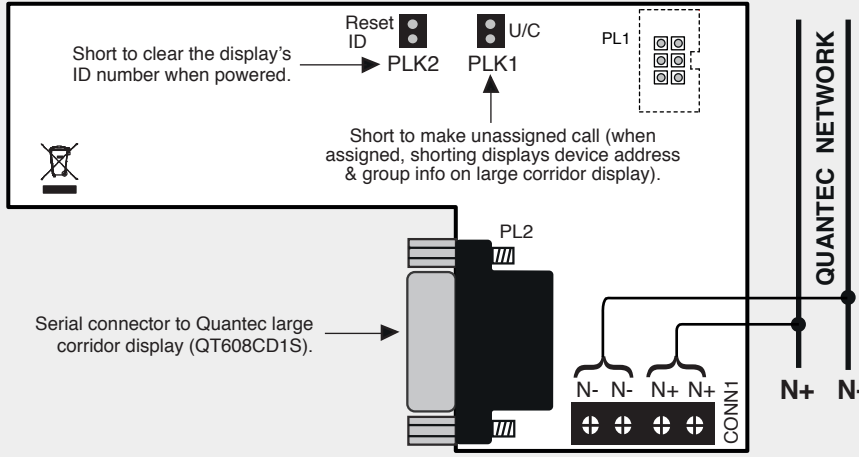

IMPORTANT NOTE:
The depth of the back box should be at least 20 mm.

Document No. DNU0615000 Rev 3

Refer to the Main Quantec Manual (Document No. DNU6012001) for further details